




62701/62702  
Uno-Plissee-bohrlos

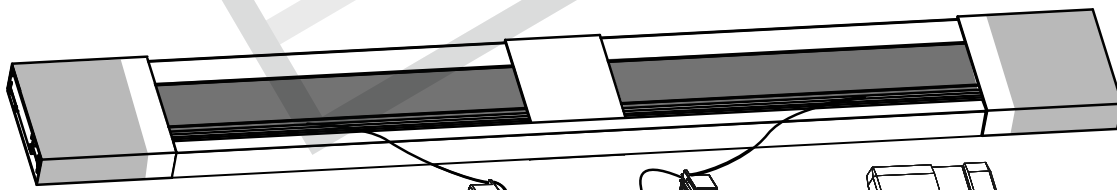


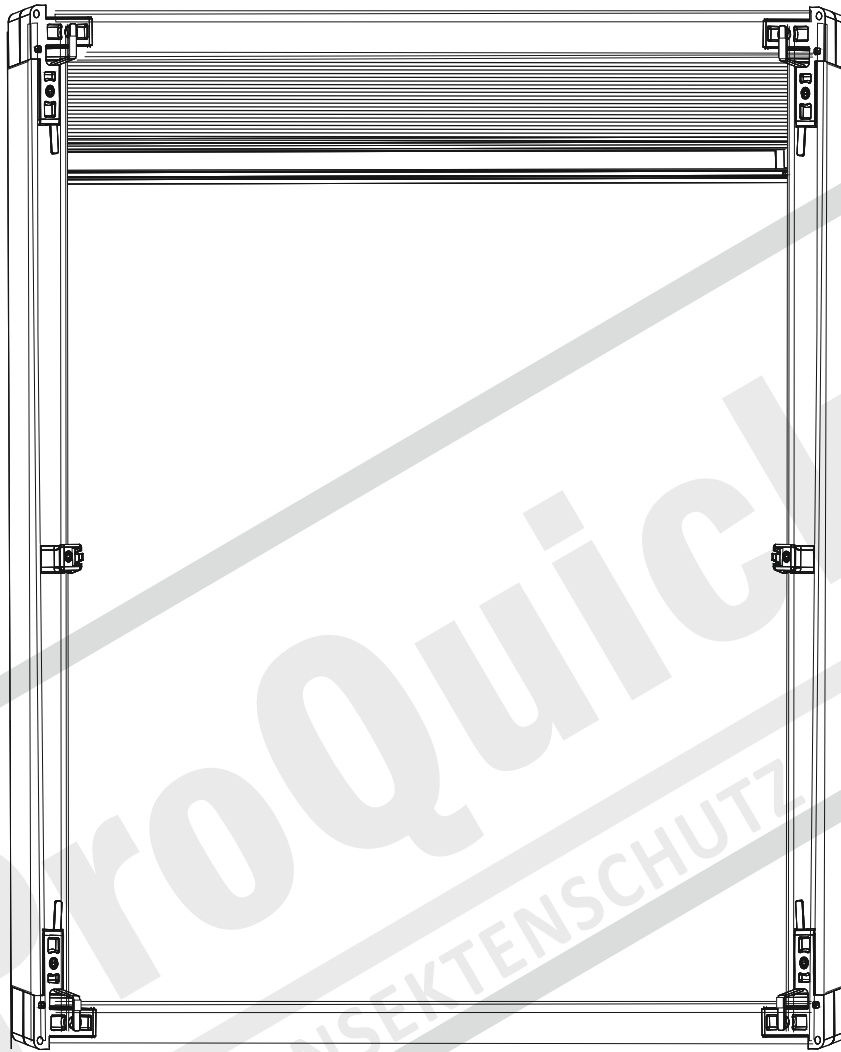


1x

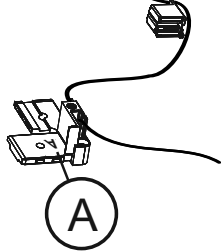


A

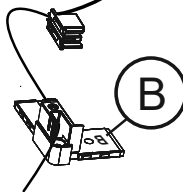

B

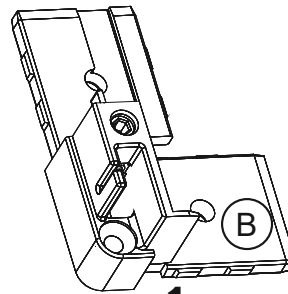

1x

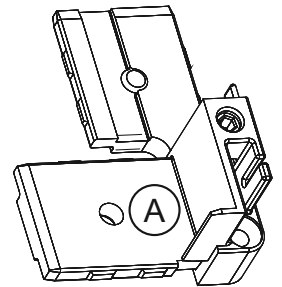

1x




2x




2x



2x




2x




2x




2x



1x

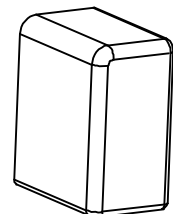


4x

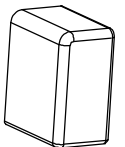


4x


1

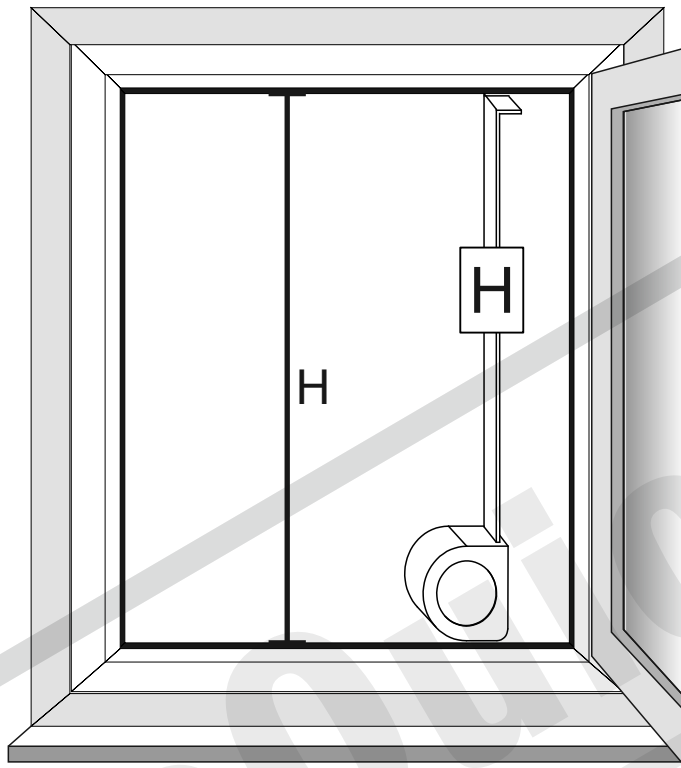


2

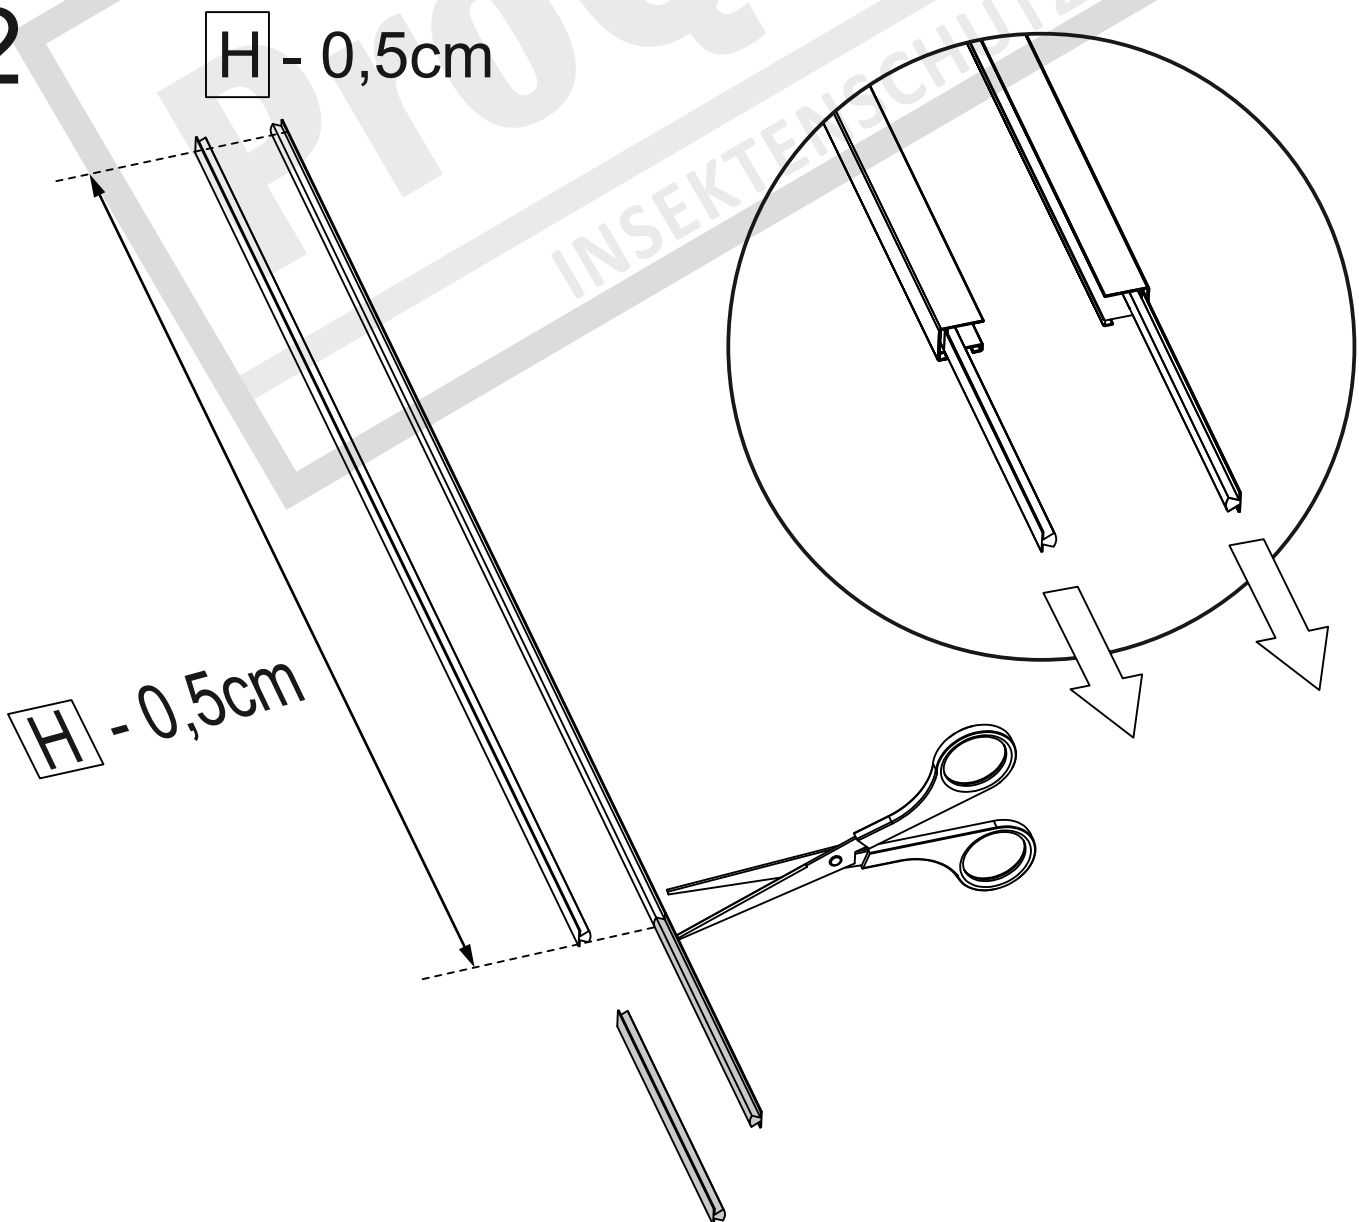


3

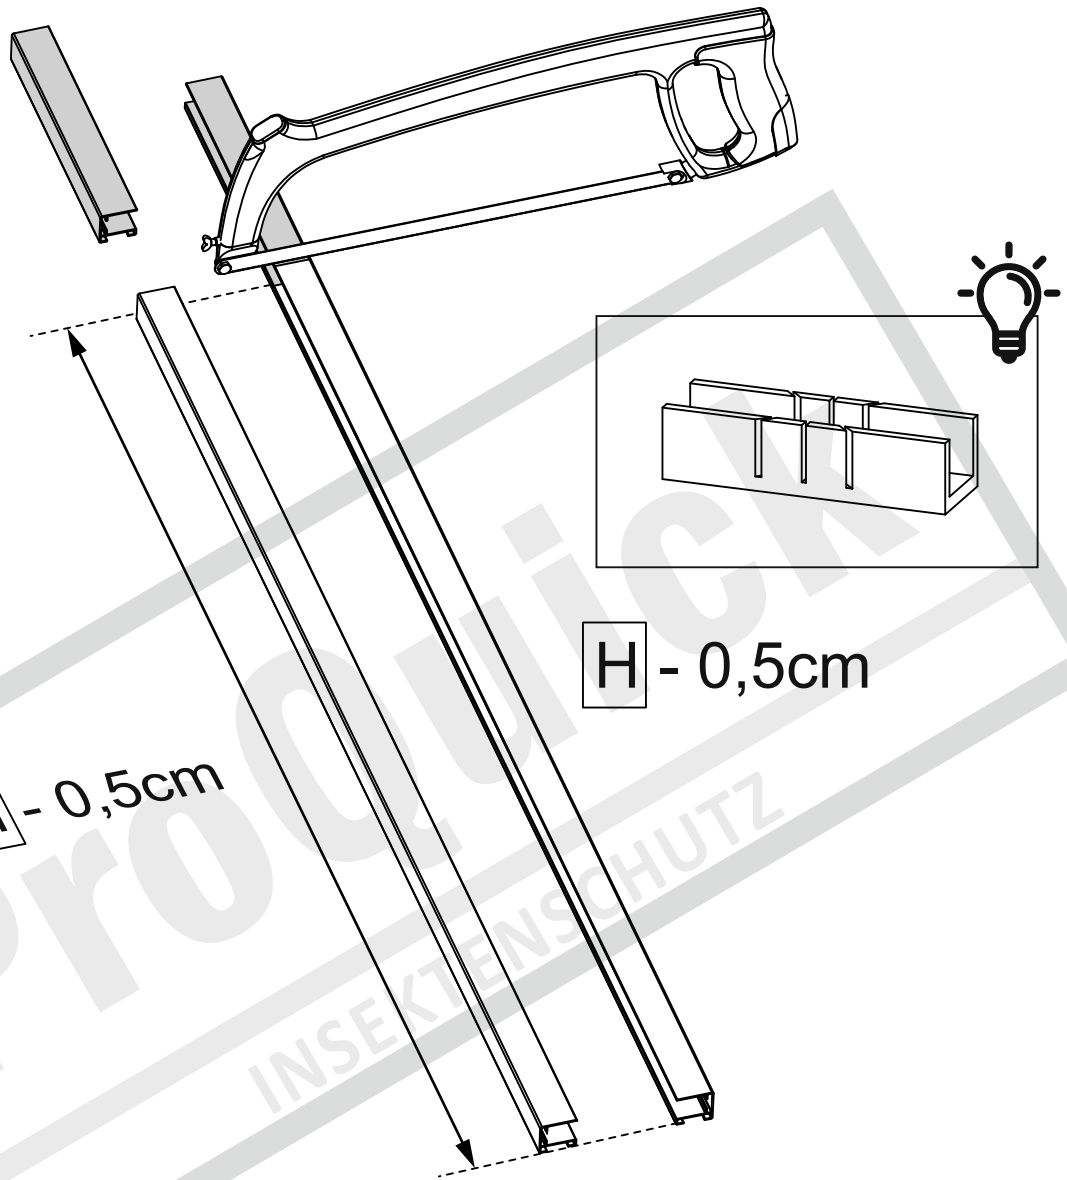


4

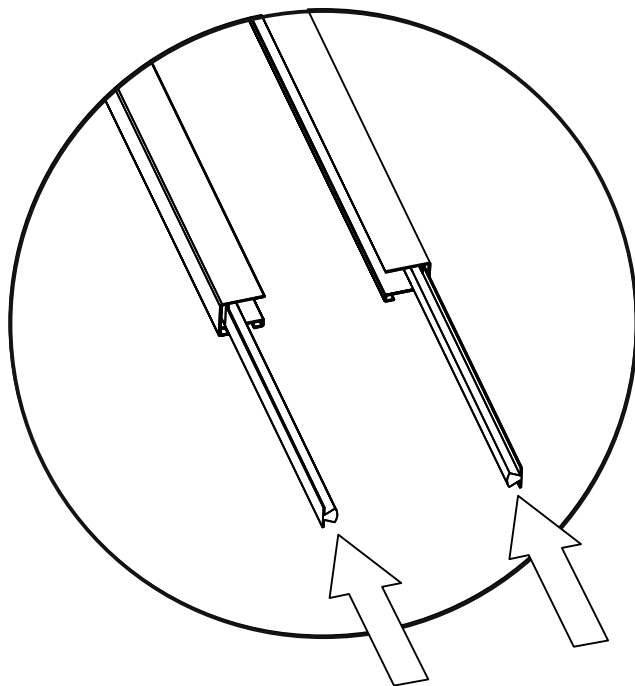


5

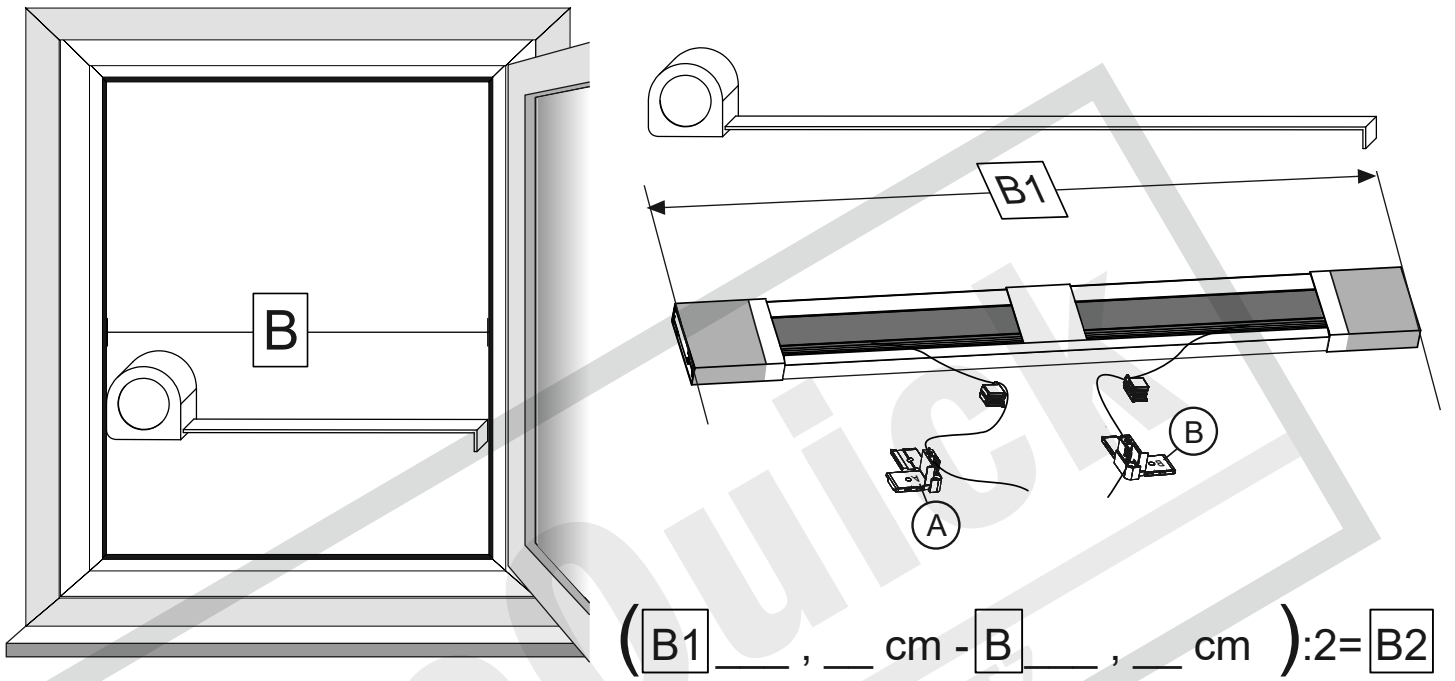


6

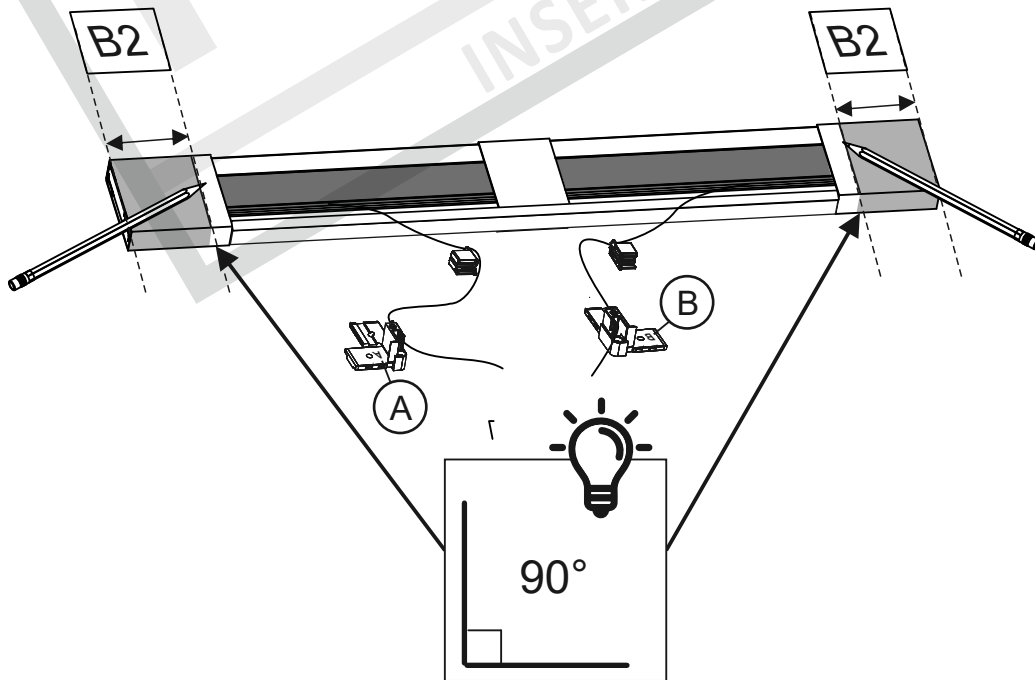


7

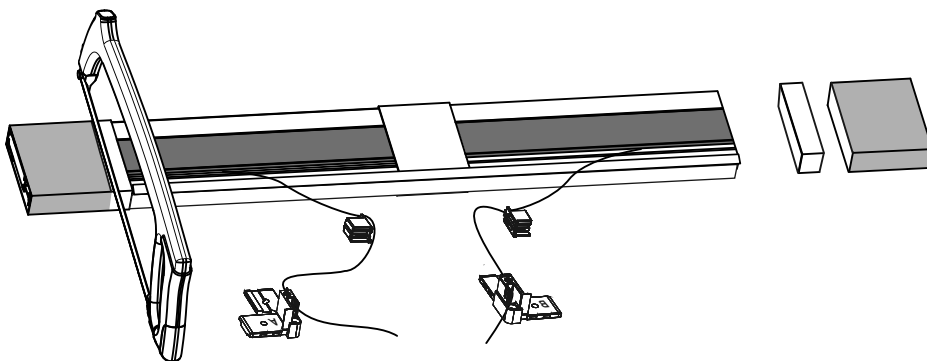


8

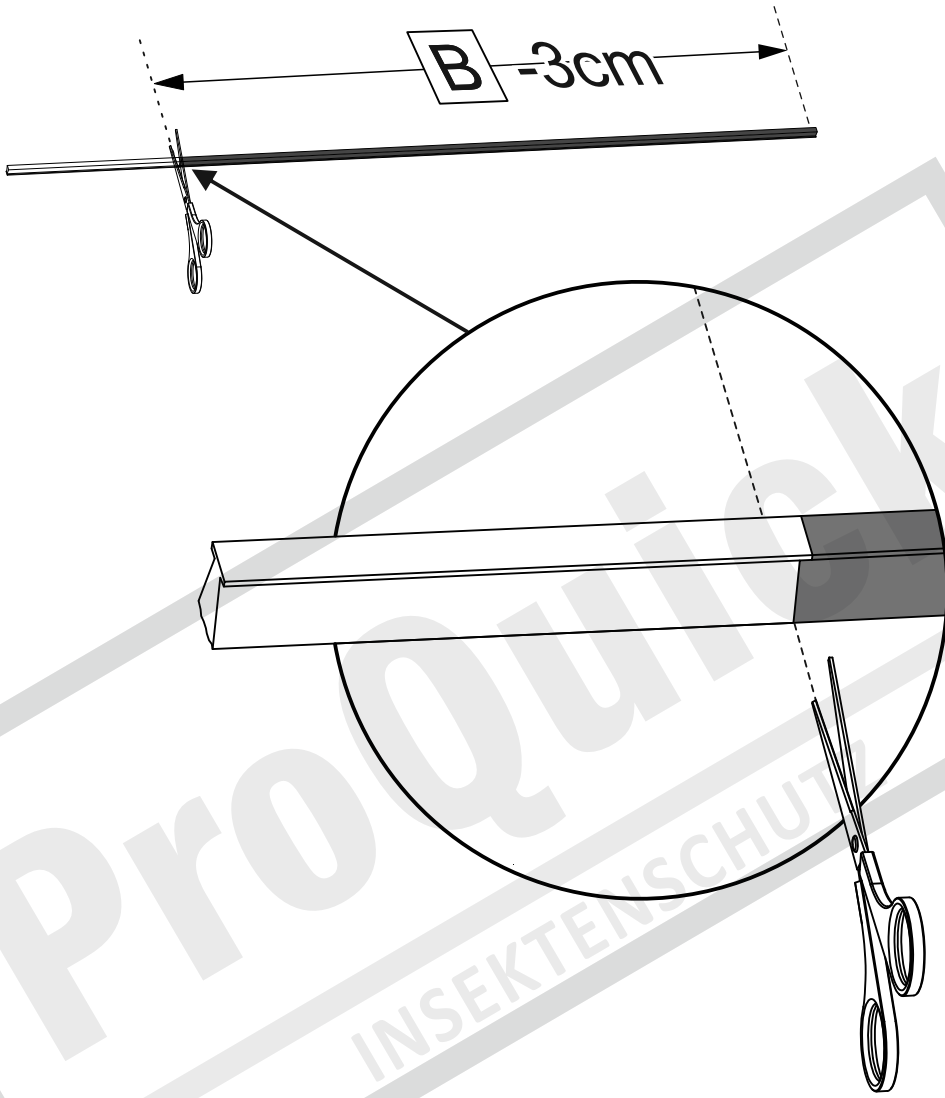


9

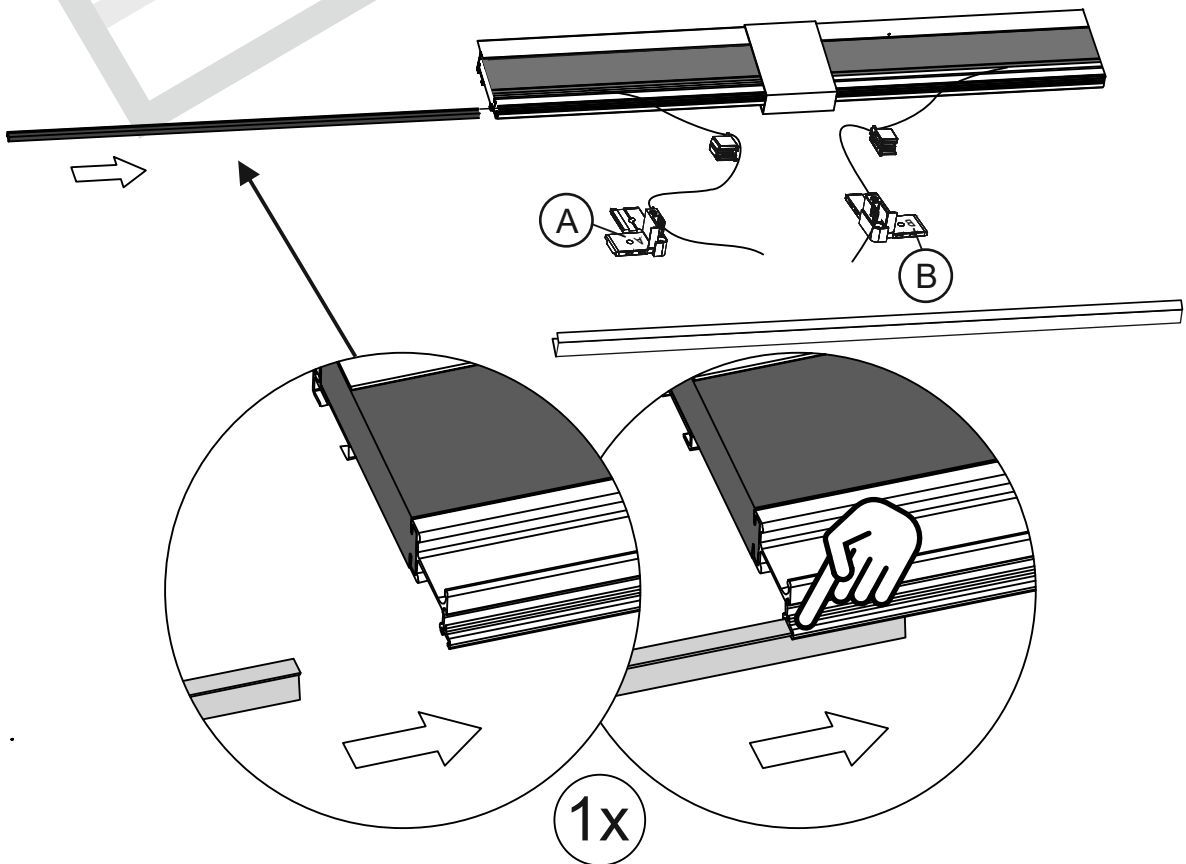


10

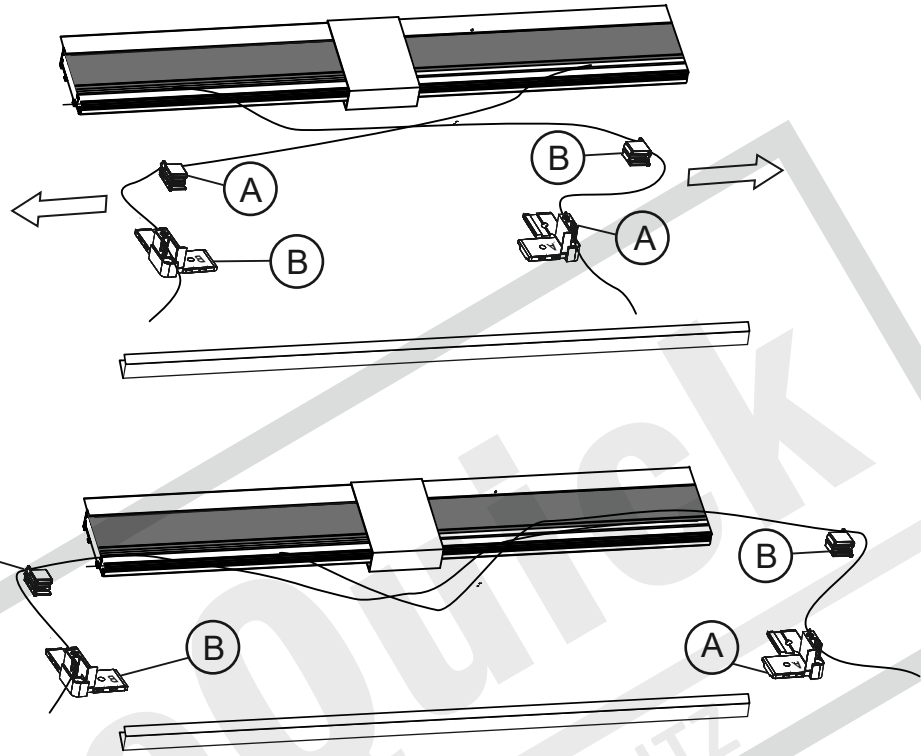

11

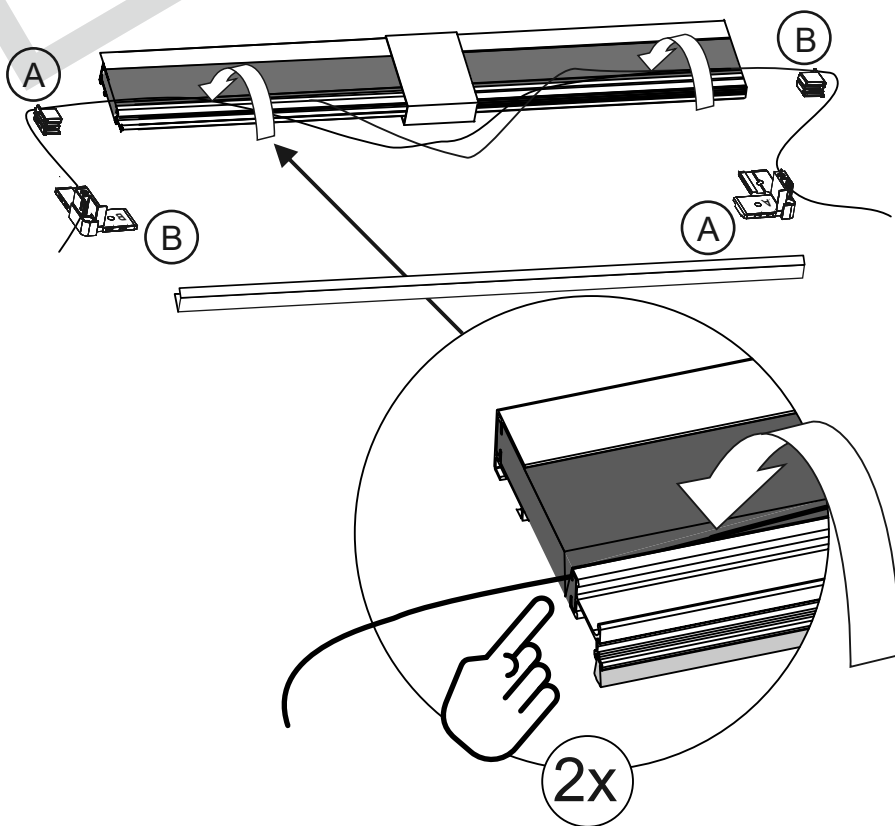


# 12

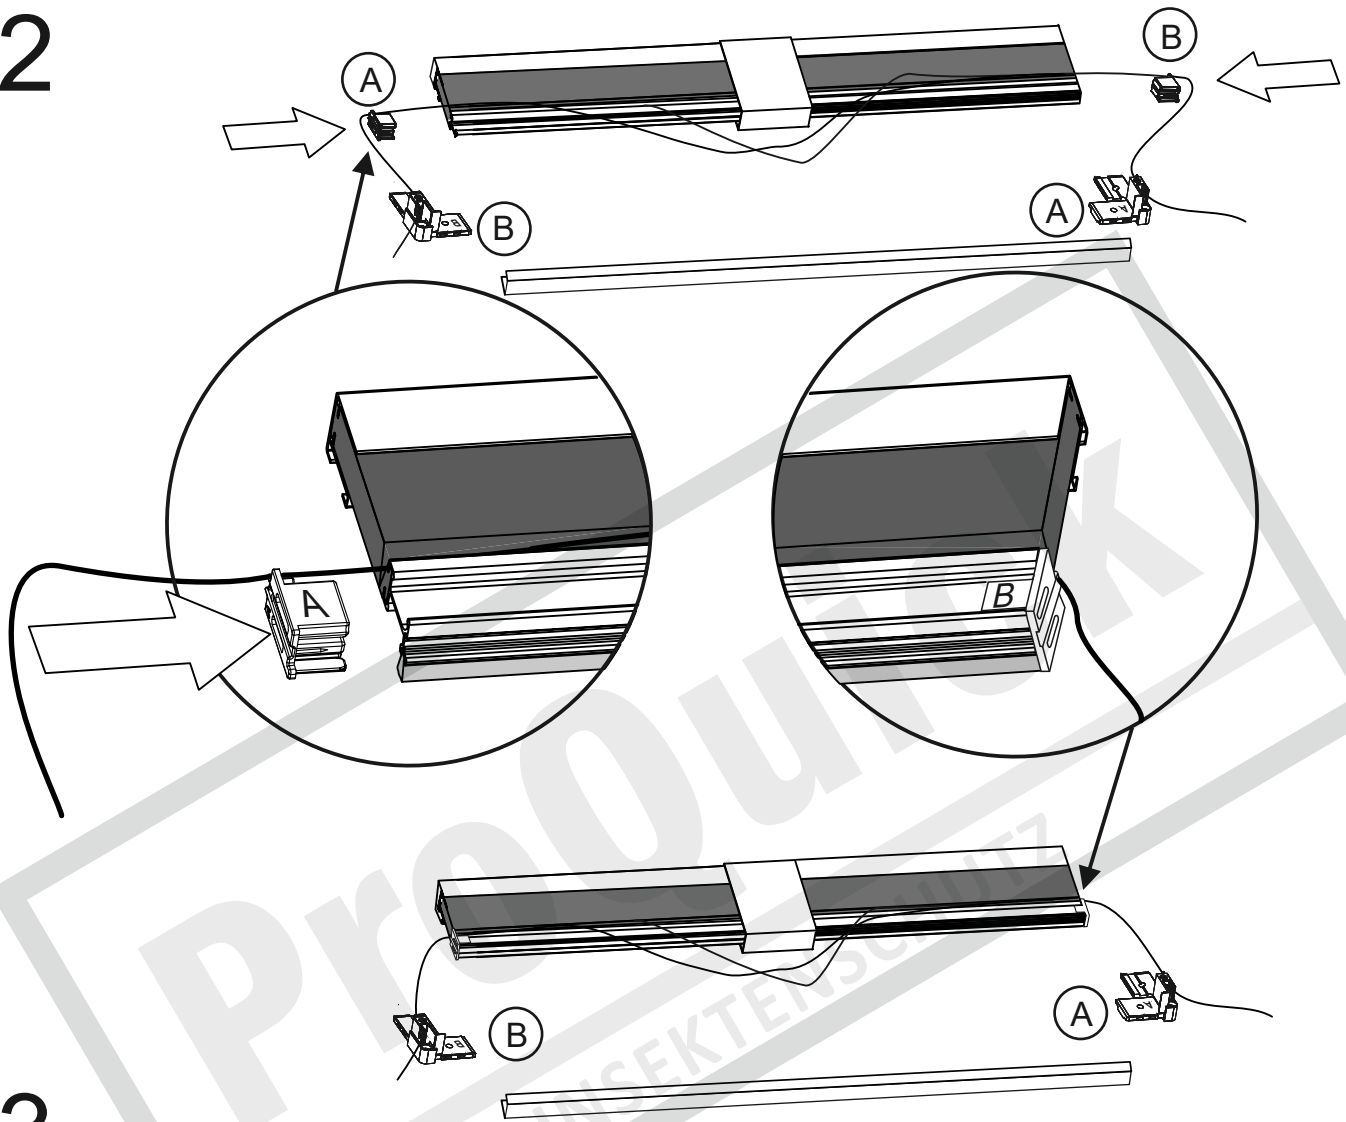


# 13

\*Zubehör in Winkelbox

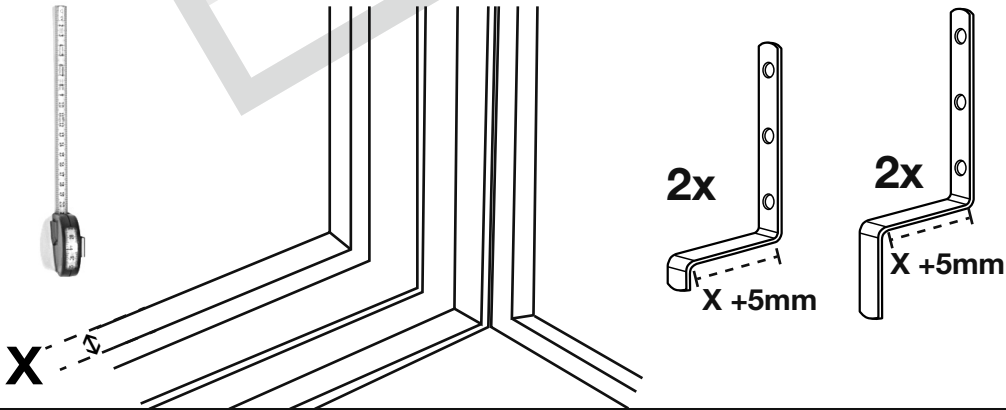


ohne Zubehör  
aus Winkelbox

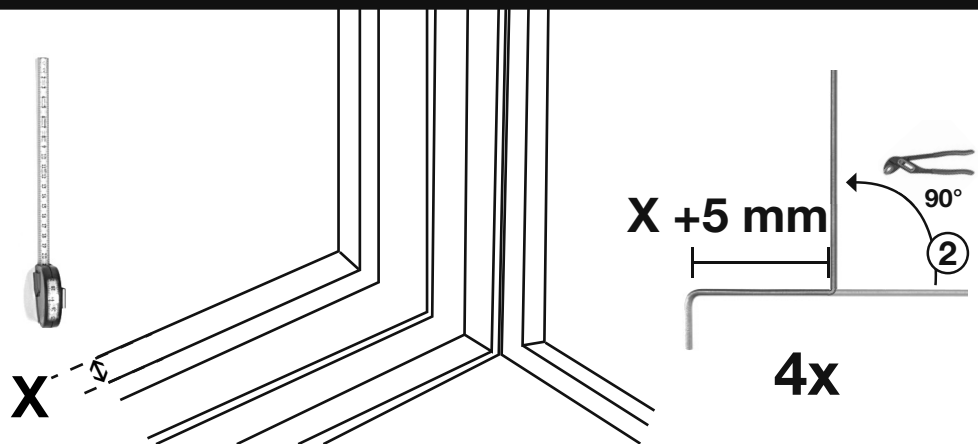





14

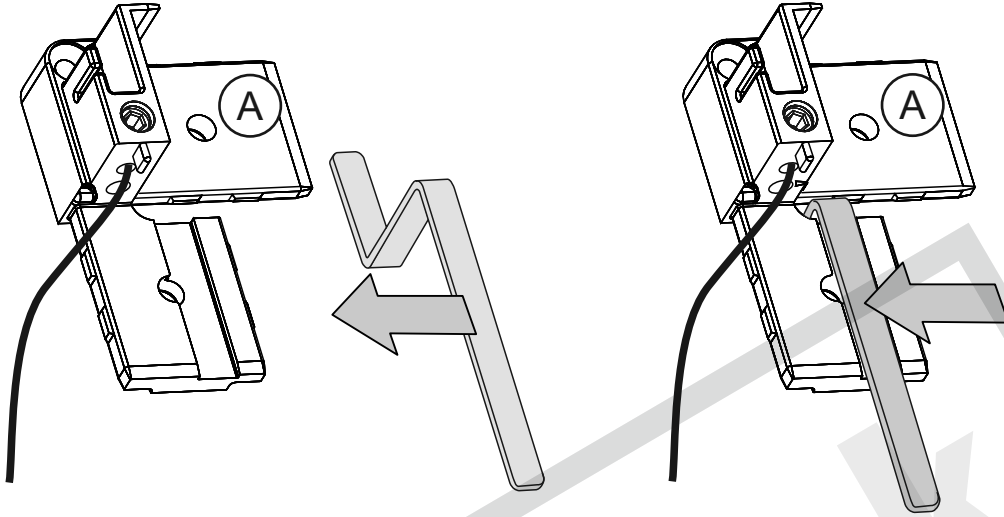


15

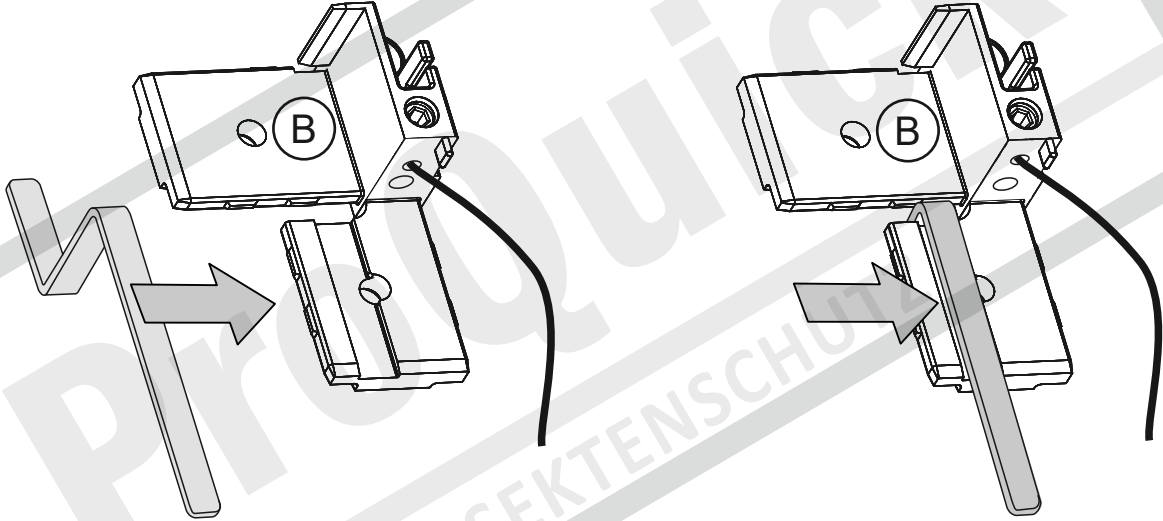


16

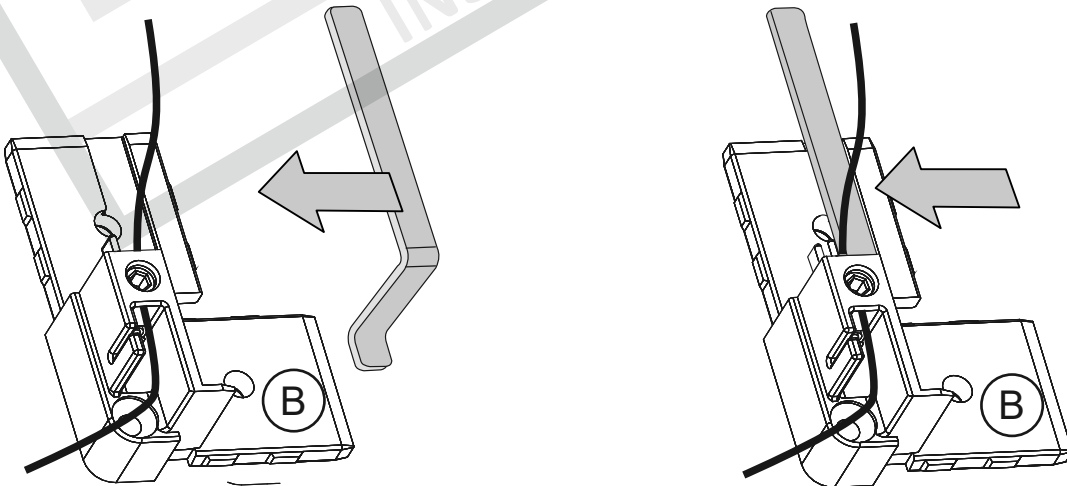


17

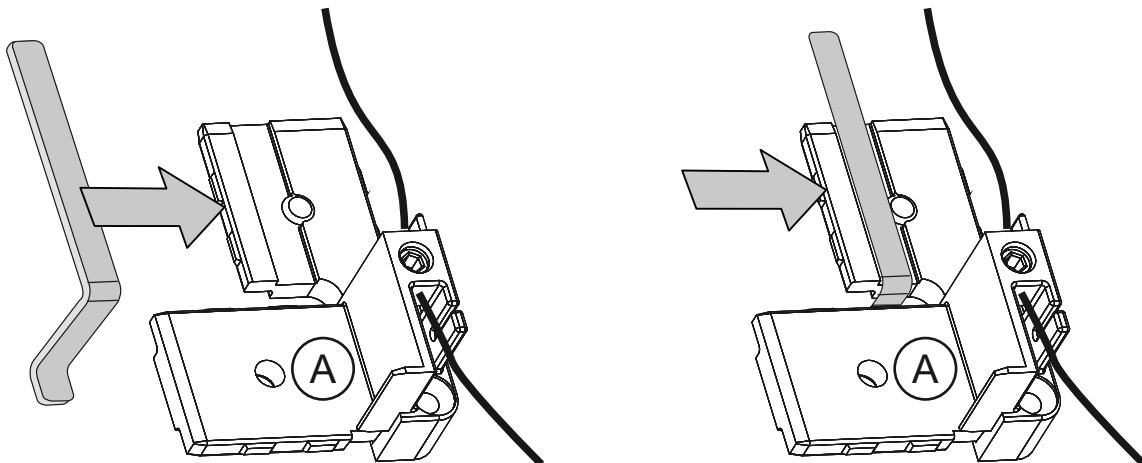


# 18

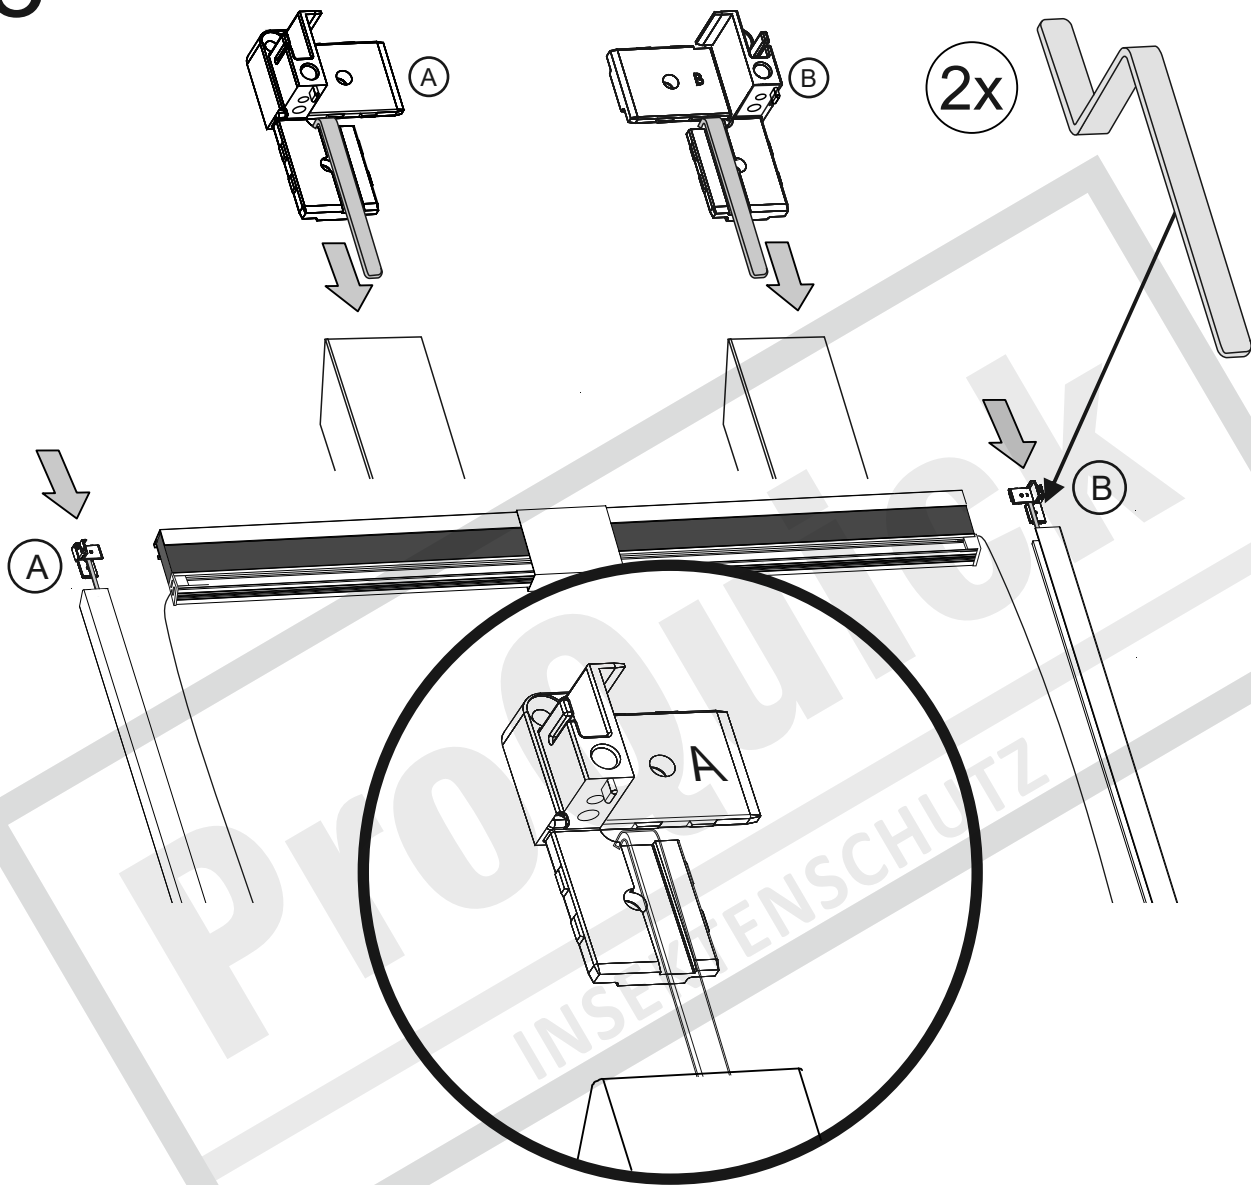


# 19

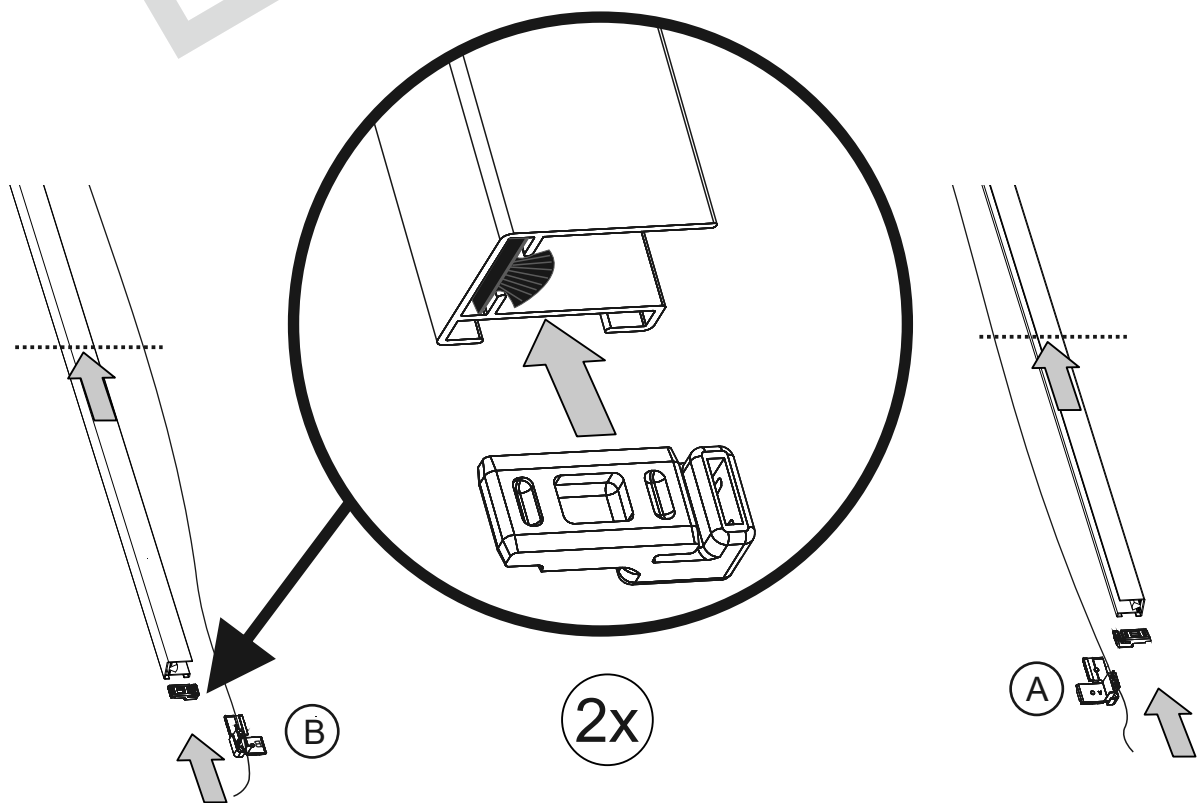


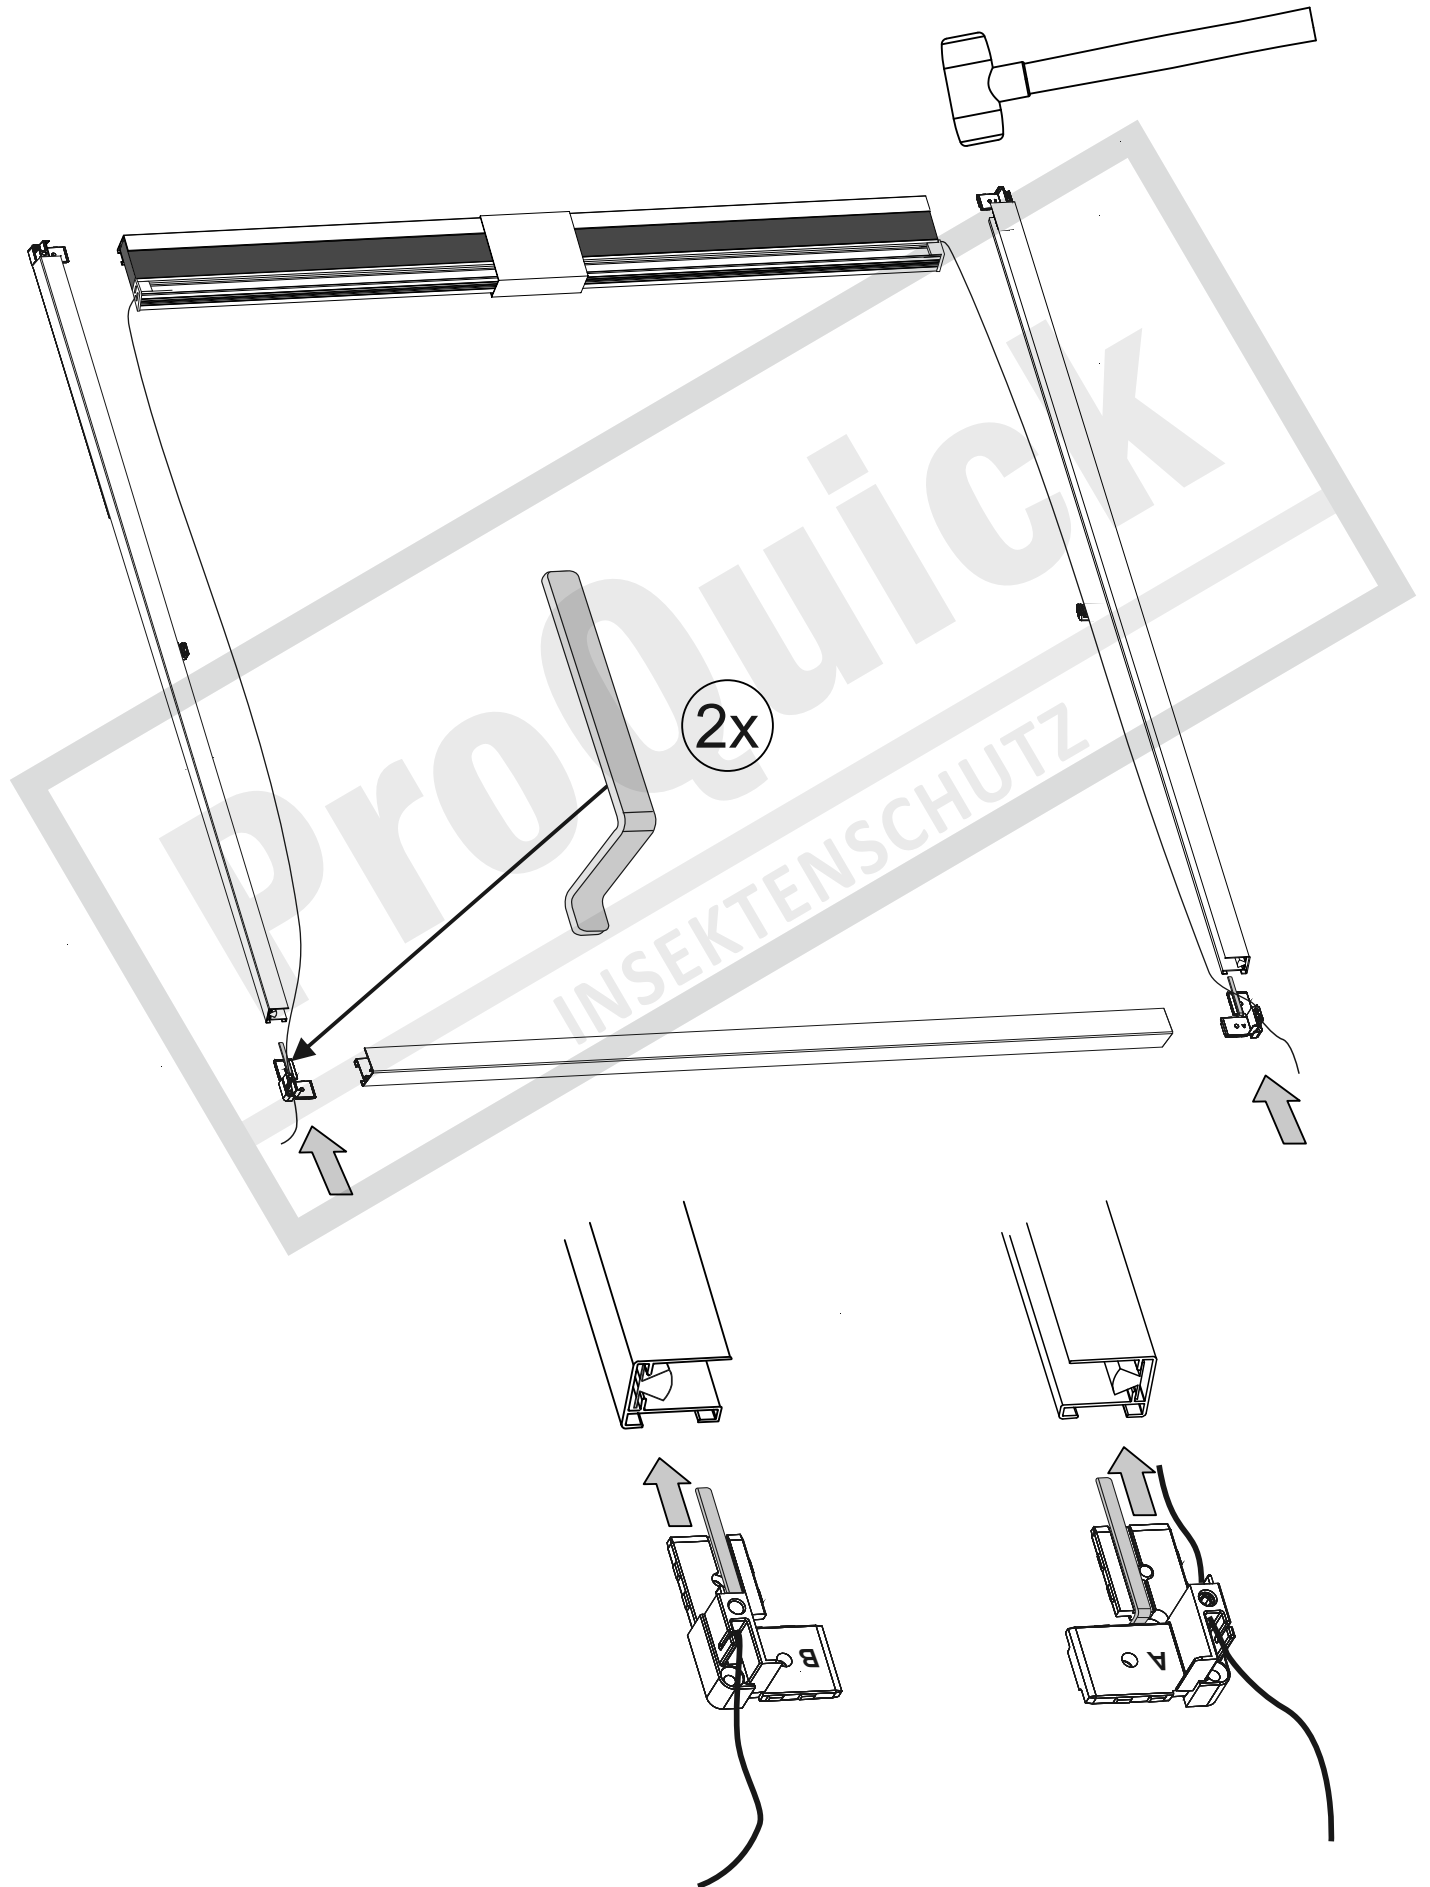


21

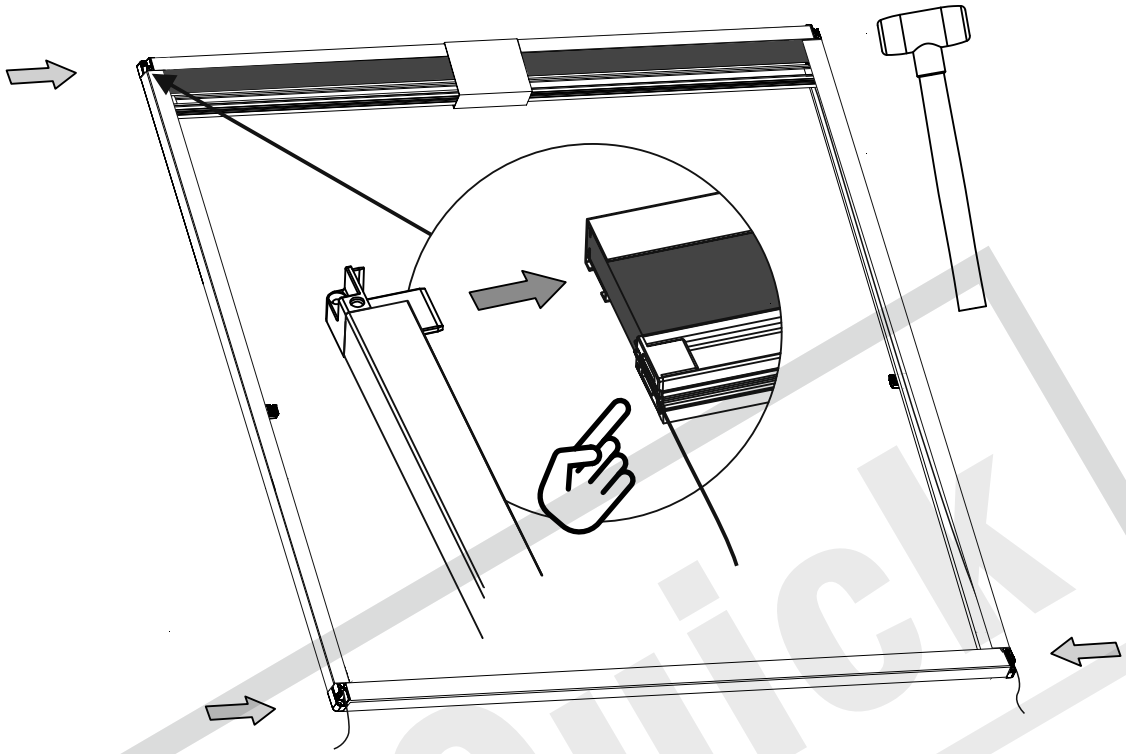


22

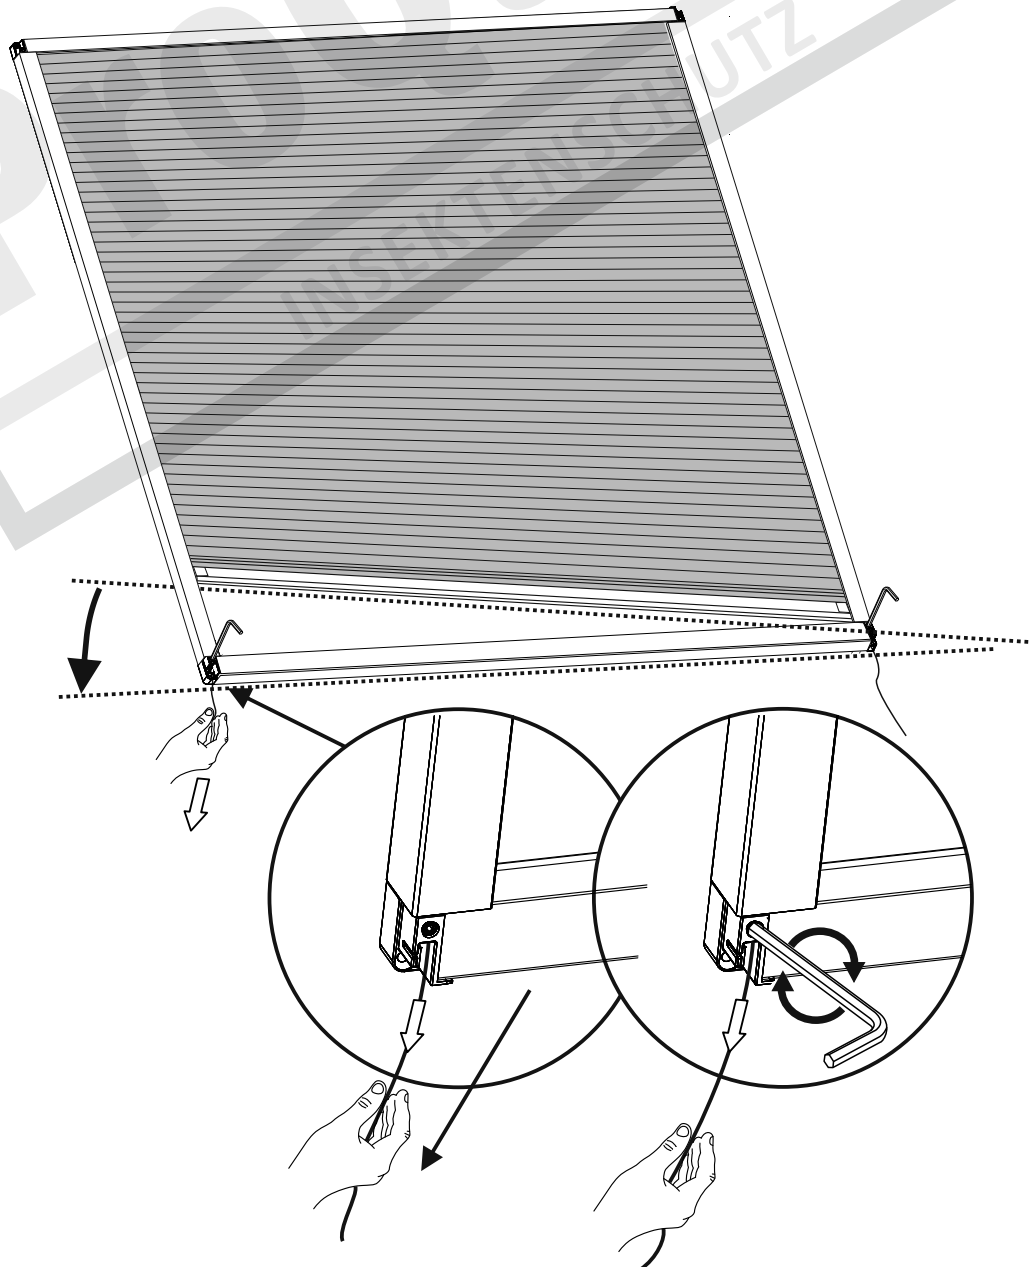


23

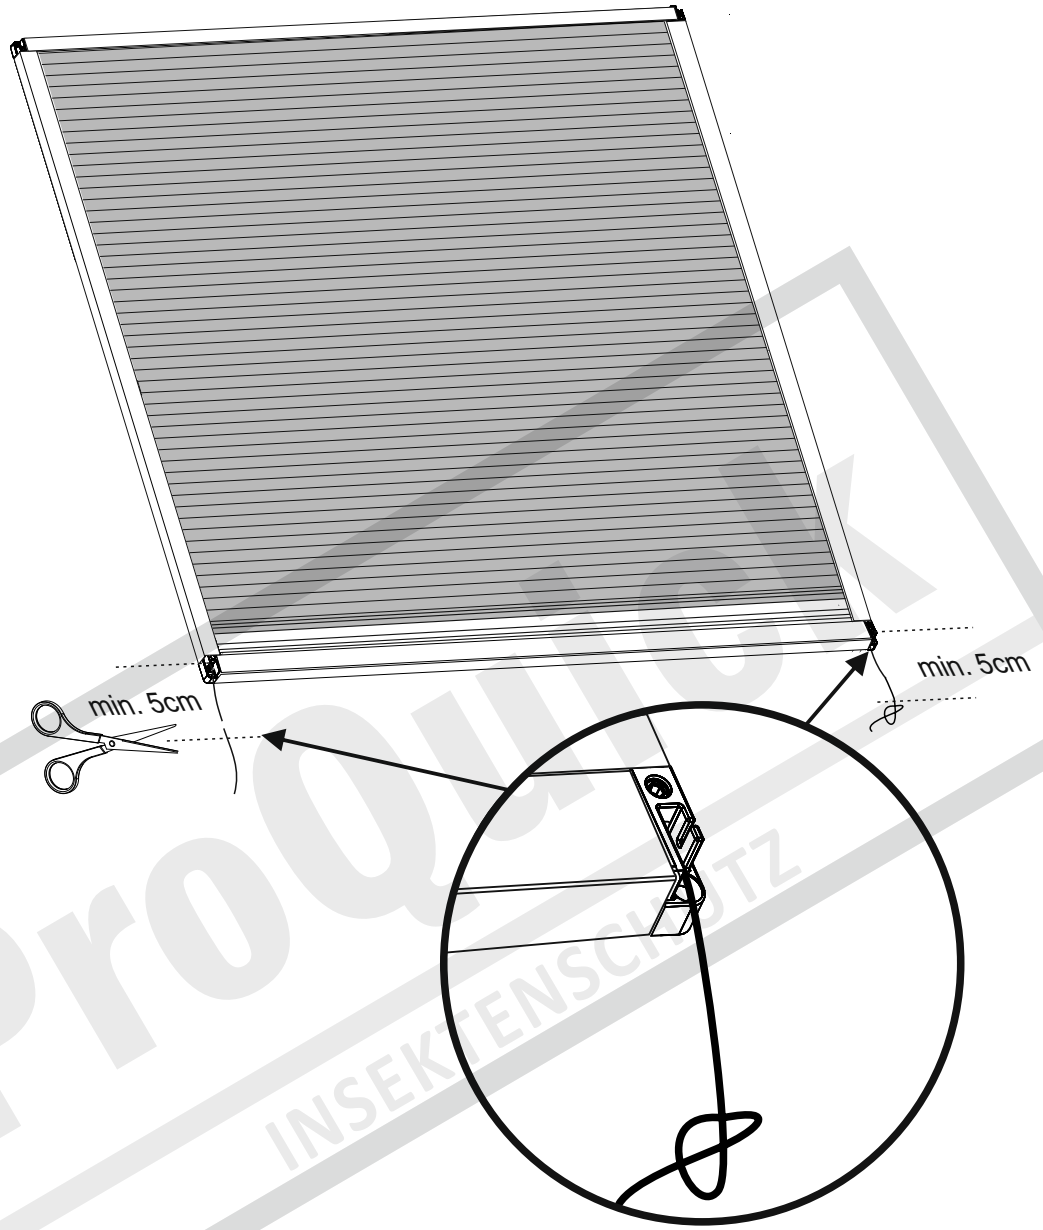


24

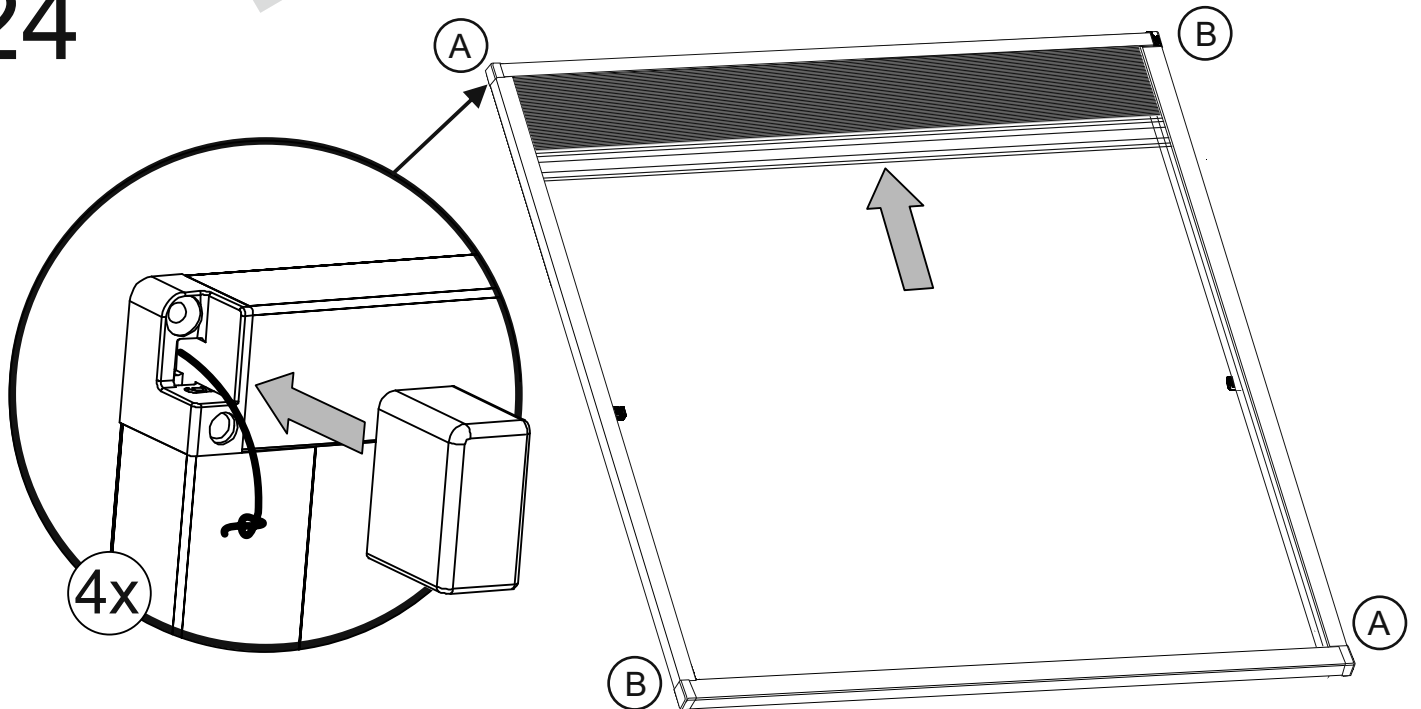


25

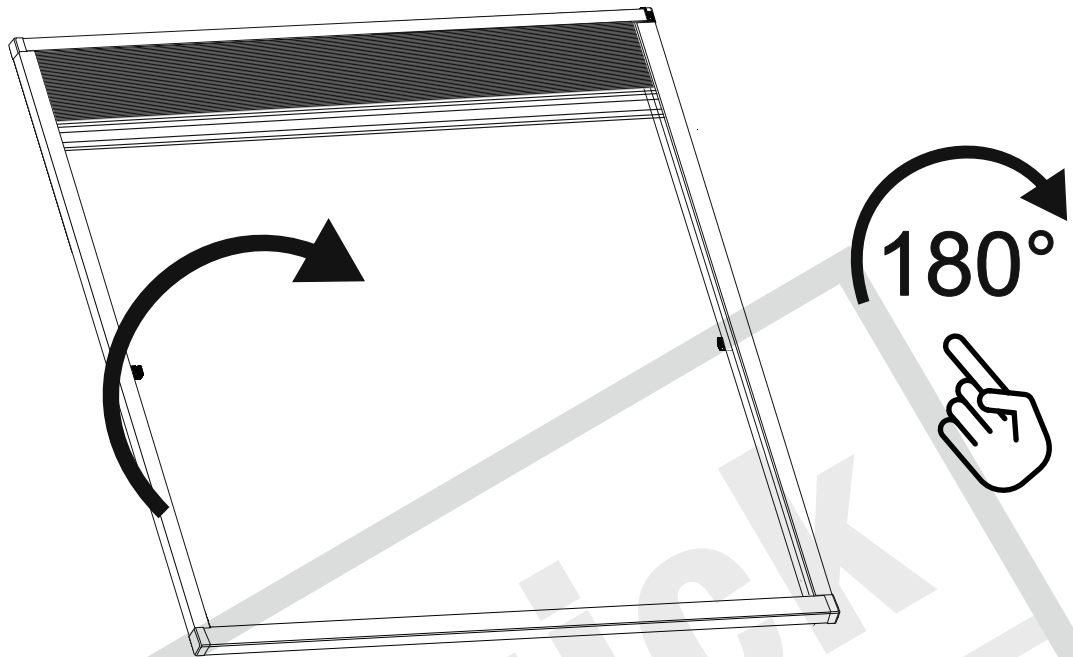



26

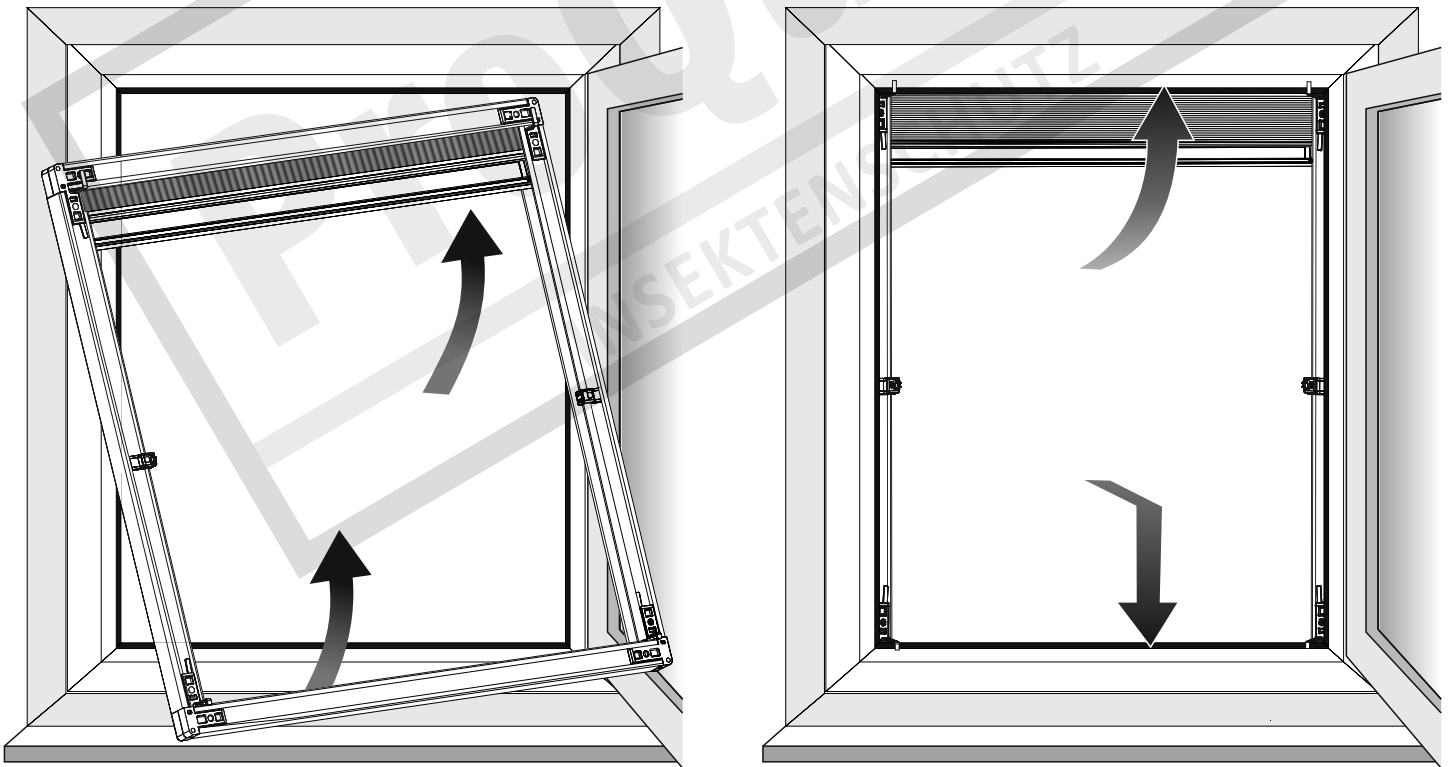


27

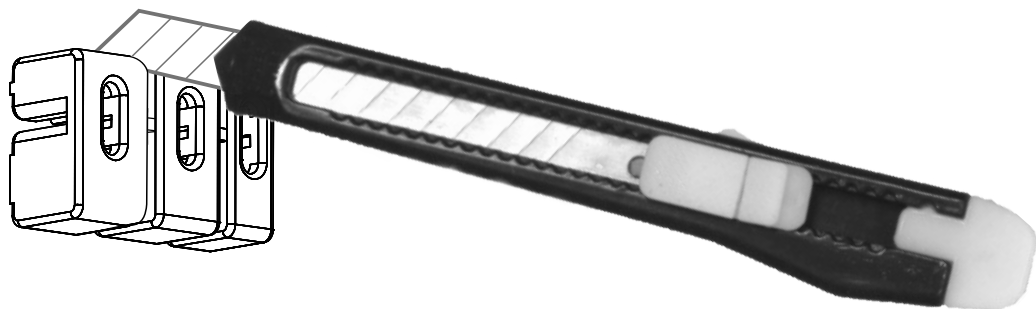

28

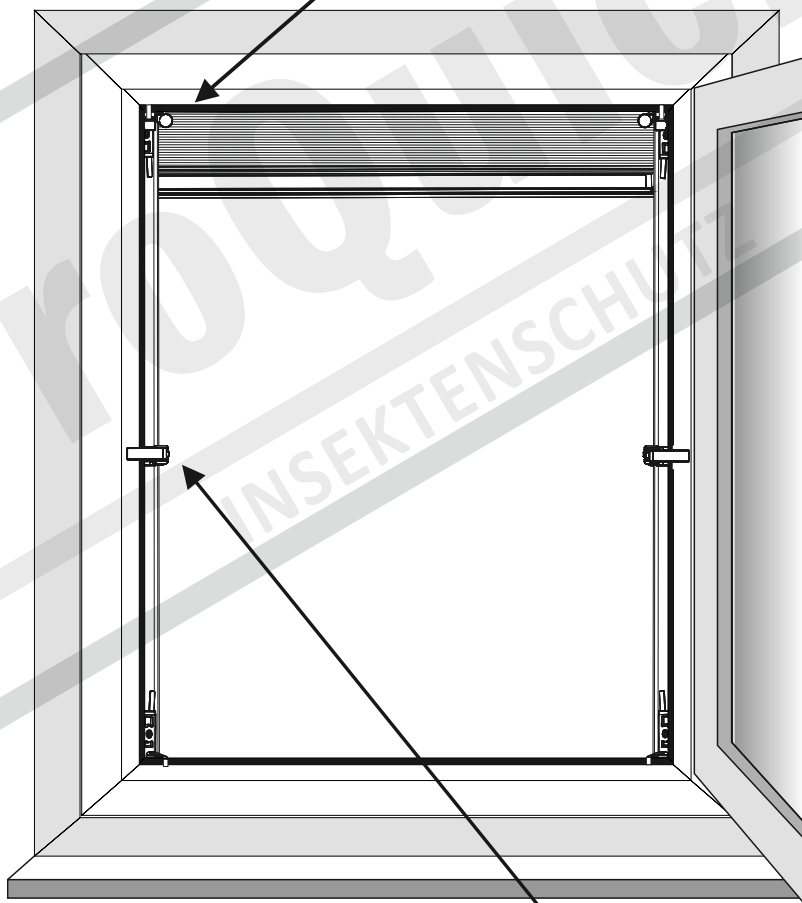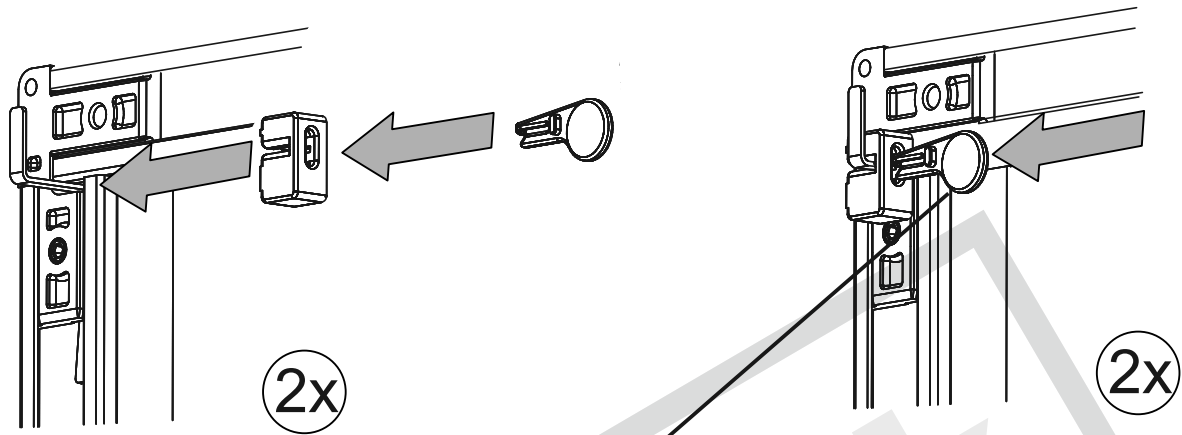

29

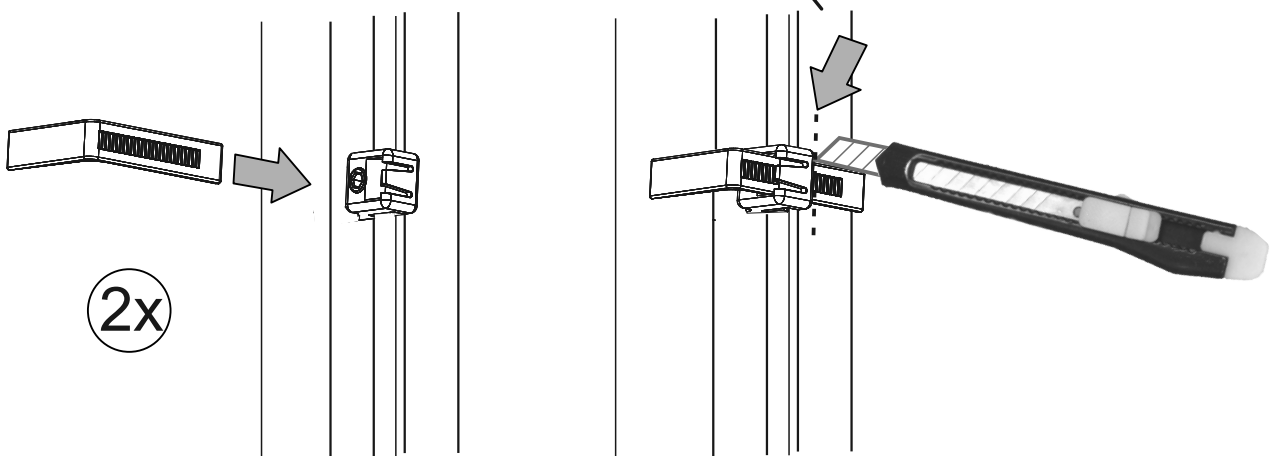



More Info and downloads:  
[www.proquick.de](http://www.proquick.de)

